



# Flare Sample Location Diagram

## Sample ports at common inlet waste gas line

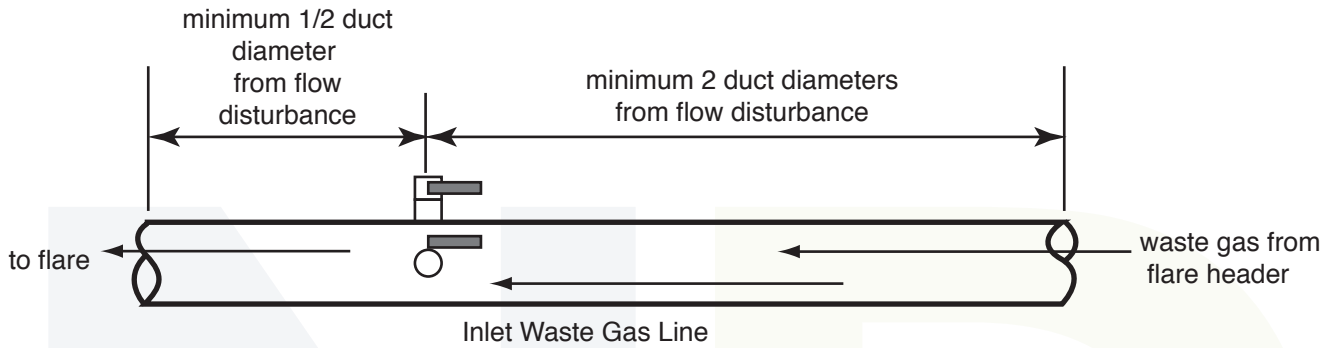

Cross-Section View

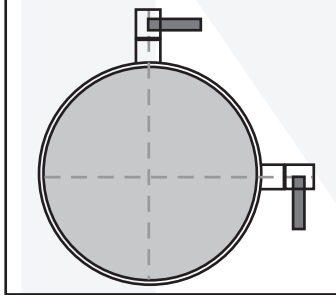

- ports should not extend into stack, and should be 90° from each other
- ports may be 1.5" (2" preferred) with ball valve with internal threads at outlet to allow for 1" OD probe
- there should be clearance at the port locations for insertion of test probes
- consideration of "ease of access" to ports should be made as well
- client to provide safe access to sample ports

## General Flare Diagram

