

Emissions Testing Support Requirements: Circular Stack

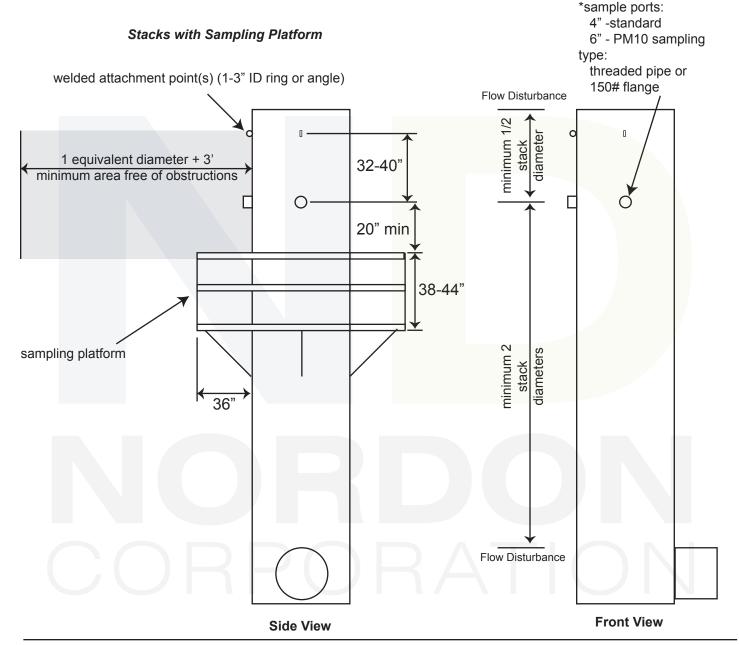

- attachment points- necessary when sampling for PM, PM10, (possibly NH3)
- ports should not extend into stack, and should be evenly distributed
- there should be clearance at the port locations for insertion of test probes
- consideration of "ease of access" to ports should be made as well
- client to provide safe access to sample ports

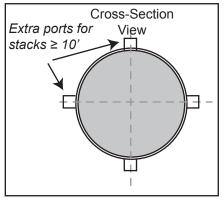

NOTE: Drawings are NOT to scale

